



## CONNECTION

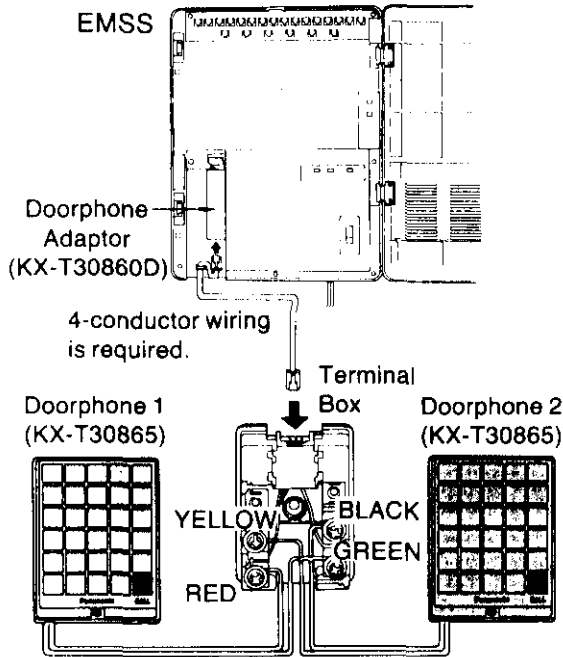

# Operating Instructions

Model No. **KX-T30865**

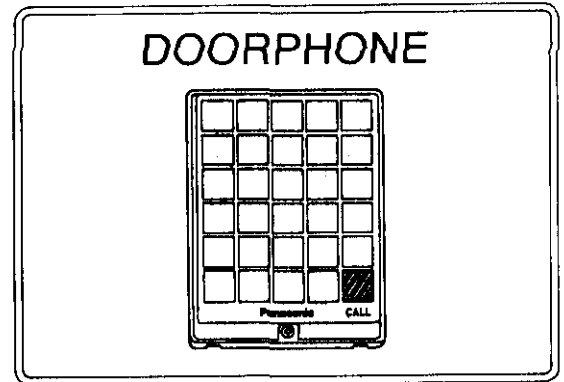

## Panasonic

Printed in United Kingdom

PQQX5484XA

Please read before use.

**Thank you for your purchasing the Panasonic Doorphone, KX-T30865.**

When you connect the Doorphone (KX-T30865) to the EMSS (KX-T30810, KX-T61610, etc.), the Doorphone Adaptor (KX-T30860D) is required. Please read the Connecting Instructions for the KX-T30860D and the Installation Manual for the EMSS. (KX-T30860 is available for only KX-T30810.)

## INSTALLATION


1. Loosen the screw to separate the doorphone into 2 halves.

2. Install the lower case to the wall with 2 screws.  
\*2 kinds of screws are included. Please choose according to your wall type. See the followings.

- ..... when a doorphone plate has been fixed to the wall.
- ..... when you wish to install the doorphone directly to the wall.


3. Connect the wires from the terminal box to the screws located in the upper case.

to the terminal box

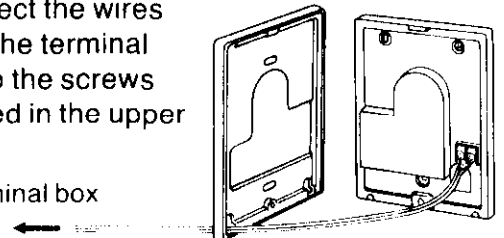

4. Secure both halves together and re-install the screw.

## OPERATION

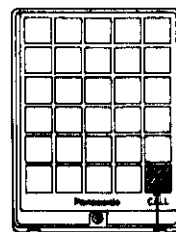

Call button

1. Push the Call button and wait for an answer from the inside of the door.  
\*A beep tone will be heard when you push the Call button.
2. Speak to the doorphone.  
\*Your voice will be heard inside the room.