

Expansion Modules

Expansion Modules for IP Phone 1200 Series Quick Installation Guide

This document provides information about the LCD Expansion Module: 12-Key Self-Labeling and the LED Expansion Module: 18-Key Paper Label. You can download all required documents at www.nortel.com.



LCD Expansion Module: 12-Key Self-Labeling



LED Expansion Module: 18-Key Paper Label

Description

The Expansion Modules for IP Phone 1200 Series (Expansion Module) provide either 12 or 18 additional line/programmable feature keys for your IP Phone. You can place the IP Phone and Expansion Modules on your desktop or you can wall-mount the IP Phone and Expansion Modules.

Up to seven LCD Expansion Modules or up to two LED Expansion Modules are supported on a single IP Phone. The two Expansion Module types are not supported on the same IP Phone.


The Expansion Modules are supported on the IP Phone 1220 and IP Phone 1230.

Installing the Expansion Modules



Caution! To avoid damaging equipment, remove the power from the IP Phone before connecting an Expansion Module.

- 1 Remove power from the IP Phone.
- 2 Remove the foot stand from the IP Phone
- 3 At the back of the IP Phone, remove the rubber plug from the Accessory Expansion Module (AEM) port.
- 4 Plug the 10-pin cable from the Expansion Module into the AEM port on the back of the IP Phone. Align the red line on the cable with the triangular mark next to the AEM port.

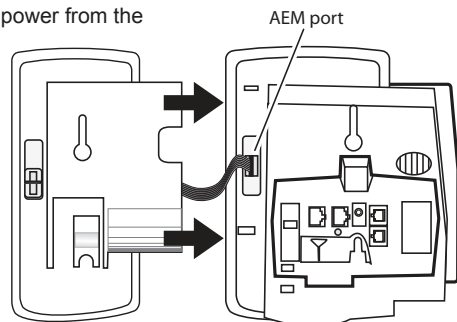

- 5 Place the connecting arm of the Expansion Module behind the IP Phone and align the Expansion Module connecting tabs with the connecting slots on the back of the IP Phone.
- 6 Press the Expansion Module and IP Phone firmly together until the Expansion Module locks into place.
- 7 If connecting another Expansion Module, repeat steps 3 to 6. A second Expansion Module is attached to the right side of the first Expansion Module.

Attaching the foot stands

Set the Expansion Module and IP Phone foot stands to the same angle.

- 8 Align the bottom tabs on the foot stands with the position 1 slots or the position 2 slots on the back of the Expansion Module and IP Phone, and snap the foot stands into place.
- 9 Ensure that the tab on the Expansion Module foot stand is under the tab on the IP Phone foot stand.

For more information, see the *IP Phone 1210/1220/1230 Quick Installation Guide* (NN40050-301).


Completing the installation

- 10 Connect power to the IP Phone. The IP Phone and Expansion Modules power up. The Expansion Modules use the electrical connection of the IP Phone for power. Expansion Modules do not have their own power source.

After you power up your IP Phone, the Expansion Module LEDs or LCD display icons flash (depending on Expansion Module type), until communication with the IP Phone is established. For information about programming features, see the *IP Phone 1200 Series User Guide* (NN40050-111).

Wall-mounting the IP Phone and Expansion Modules

- 11 Remove the foot stands from the IP Phone and Expansion Modules.
- 12 Ensure that the cables are properly connected to the IP Phone, and then connect the Expansion Modules to your IP Phone, as previously described.
- 13 Wall-mount the IP Phone and Expansion Modules using the keyholes in the back of the IP Phone and Expansion Modules. For more details, see the *IP Phone 1210/1220/1230 Quick Installation Guide* (NN40050-301).

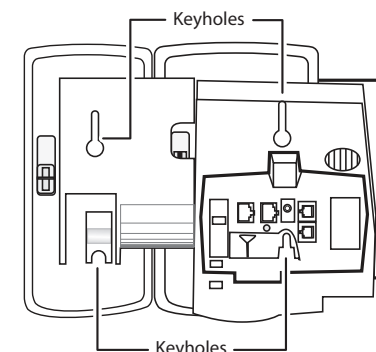

For more detailed installation instructions, see *IP Phone 1200 Series Installation* (NN40050-302) at www.nortel.com.

NORTEL

N0154126
NN40050-303
Standard 01.01

Copyright (c) 2007 Nortel Networks. All rights reserved.