

## **M5316 User Guide**

### **Dialing Instructions**

#### **Station-to Station**

Dial 4 digit station number

#### **Local Calls**

Dial 9 + number

#### **State Long Distance**

##### **Calls**

Dial authorization code\* + area code + number

#### **Personal Long Distance Calls**

Dial 9 + 0 + area code + number. (*Access your long distance carrier as you normally would*).

#### **Emergency Calls**

Dial 55

#### **800 Calls**

Dial 9 + 1 + 800 + number

*\* Contact Telecommunications for your authorization code*

### **Station Sets**

#### **Receiver.**

##### **Speakerphone and Ringer Volumes**

During a call, adjust the toggle bar to comfortable level.

#### **Mute**

Press and release the **MUTE** key to activate or deactivate. (A half diamond indicator will flash when activated).

#### **Hold**

Press and release the **HOLD** key to activate or deactivate. (A half diamond indicator will flash when activated).

#### **RLS**

Key that terminates call.

### **Automatic Hold**

While on a call, press key of line that is ringing. System automatically puts first call on hold.

### **Automatic Line Select**

System automatically selects your **(PDN)** line when you lift the handset or press the **HANDSFREE** key when you make a call.

## **Using Your Phone**

### **Making a Call**

Lift handset or press the **HANDSFREE** key.

### **Answering a Call**

1. If the call is ringing on a line other than your **PDN**, press the line or intercom key beside the flashing indicator.
2. If your **PDN** line is ringing, either lift the handset or press the **HANDSFREE** key.

## **Features**

### **Intercom Calls**

1. Press the **Group Intercom Calling (GIC)** key. *(You will hear dial tone and the LCD next to the GIC key goes on).*
2. Dial the **GIC** member number. *(You will hear a ringback).*
3. Called party will answer.
4. Lift the handset or press **HANDSFREE** key.

### **Last Number Redial**

- 1 Dial ##.

### **3-Way Conference Calls/Call Transfer**

1. Press the **TRANSFER** key. *(You will hear a special dial tone, the LCD next to the TRANSFER key goes on and the LCD of the DN in use flashes).*
2. Your caller will be placed on hold automatically.
3. Dial the number of the person to whom you wish to add to the call. *(You will hear ringback tone; you are connected to the person when they answer their phone and may consult privately).*
4. To connect all three parties together, press the **TRANSFER** key again. *(The LCD next to the TRANSFER key goes on and the LCD next to the DN key goes on).*

### **Speed Call**

#### **Speed Call Short List**

*(To program with SPD CALL key)*

1. Without lifting the handset, press the **SPD CALL** key. *(The LCD next to the SPD CALL key flashes).*
2. Dial the 1-digit code to be associated with the number being stored. (0-9)
3. Dial 9 + the number to be stored followed by the # symbol. *(You will hear a confirmation tone).*
4. Press **SPD CALL** key. *(The LCD next to the SPD CALL key goes off).*

*(To Activate Speed Call)*

1. Press any DN key or the **HANDSFREE** key. *(You will hear dial tone and the LCD next to the DN key goes on).*
2. Press the **SPD CALL** key. *(The LCD next to the SPD CALL key goes on).*
3. Dial the single-digit code for the number to be dialed. *(The LCD next to the SPD CALL key goes off; you will hear call progression tones and ringback tones).*

### **Speed Call Long List**

*(To program with SPD CALL key)*

1. Without lifting the handset, press the **SPD CALL** key. *(The LCD next to the SPD CALL key flashes).*
2. Dial the 2-digit code to be associated with the number being stored. (00-99)
3. Dial 9 + the number to be stored followed by the # symbol. *(You will hear a confirmation tone).*
4. Press **SPD CALL** key. *(The LCD next to the SPD CALL key goes off).*

*(To Activate Speed Call)*

1. Press any DN key or the **HANDSFREE** key. *(You will hear dial tone and the LCD next to the DN key goes on).*
2. Press the **SPD CALL** key. *(The LCD next to the SPD CALL key goes on).*
3. Dial the single-digit code for the number to be dialed. *(The LCD next to the SPD CALL key goes off; you will hear call progression tones and ringback tones).*

*(To place a call using the Speed Call Feature)*

1. Lift the handset.
2. Dial "\*" and the single-digit code assigned to the stored number 0 through 9.
3. Dial #. *(The number is automatically dialed).*

### **Message Waiting Indicator**

To retrieve messages: *(The LCD indicator will light up when you have a message in your voice mailbox).*

1. Lift your handset or press **HANDSFREE**.
2. Press the **MSG WAIT** key to access your Voice Mail system.
3. Retrieve your messages through your voice mail system as you normally would.

## Programming Your Phone

### Time and Date Format

1. Press **PROGRAM** key.
2. Press toggle bar until ***Time and Date Format Menu*** appears on your screen.
3. Press **HOLD** to save setting.
4. Press toggle bar until you reach desired format.
5. Press **HOLD** to save setting.
6. Press **PROGRAM** or **RLS** to exit program.

### Setting Current Time and Date.

1. Press the **PROGRAM** key.
2. Press toggle bar until ***Time and Date Set Menu*** appears on screen.
3. Press **HOLD** key.
4. Enter the date using the format shown on the display.
5. Enter current time (*Based on 24-hour clock*).
6. Press **HOLD** to save setting.
7. Press **PROGRAM** or **RLS** to exit program.

### **Predial**

1. Press the **PROGRAM** key.
2. Press toggle bar until **PREDIAL?** is shown on display.
3. Press **HOLD**.
4. Press toggle bar to enable or disable the Predial feature.
5. Press **HOLD** to save the new setting.
6. Press **PROGRAM** or **RLS** to exit program.
7. To make a call when Predial is enabled, dial the telephone number (number is shown on display).
8. Pickup the handset or press **HANDSFREE**.